


Downspout Infiltration Drywell

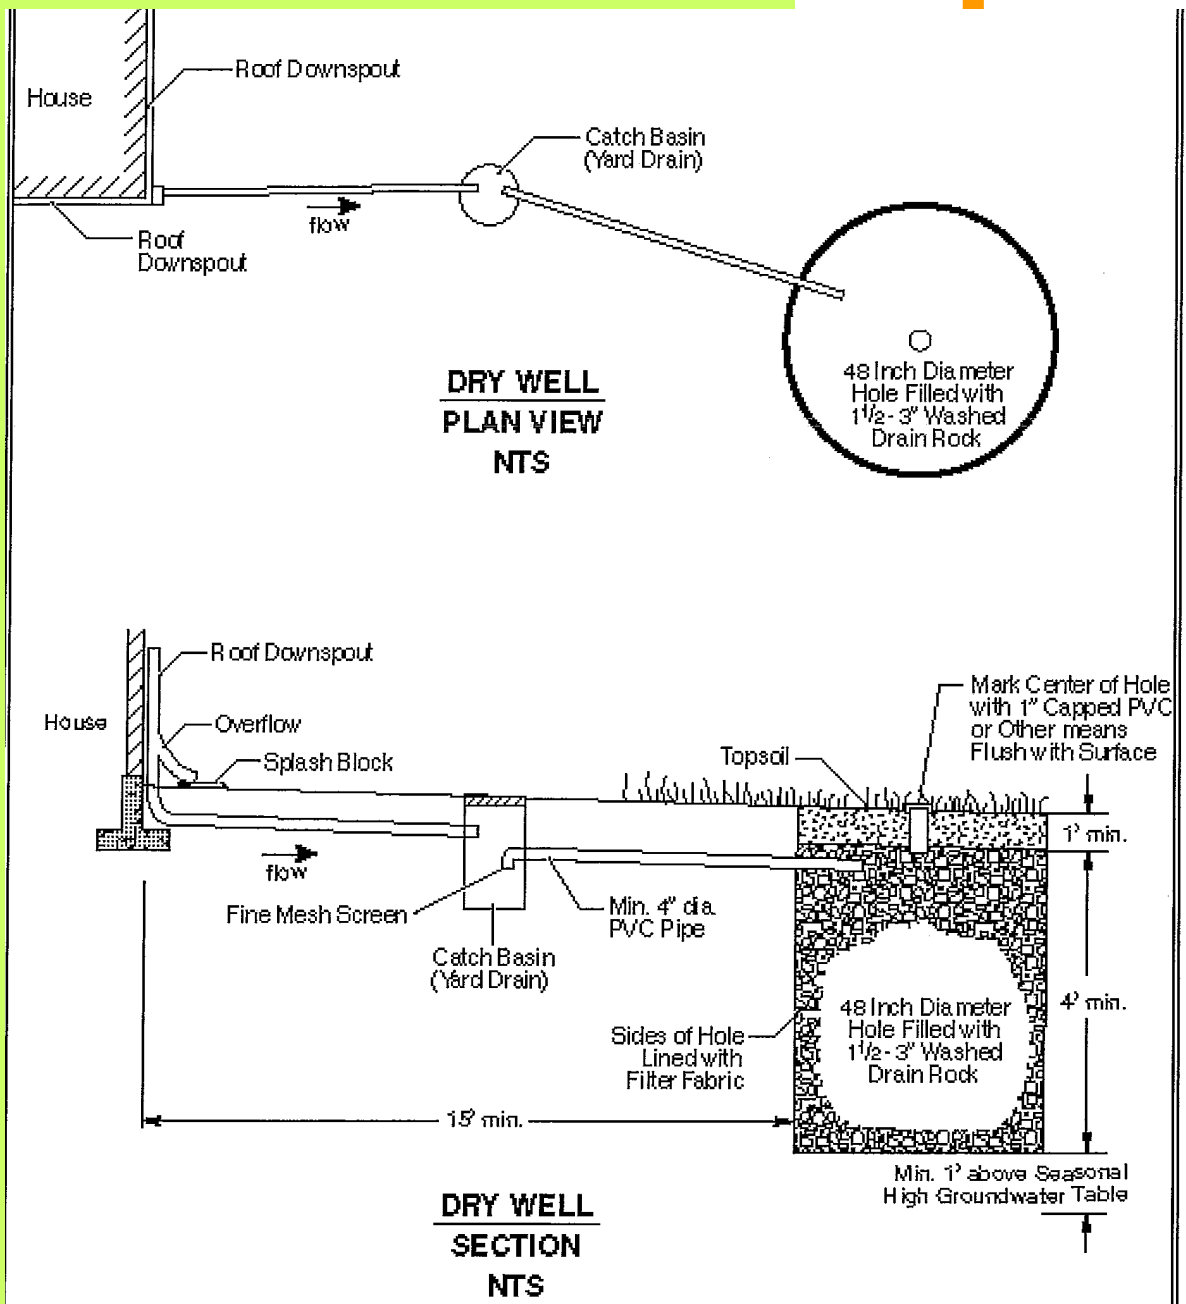

Design Basics

Drywell bottom must be 1' above the seasonal high ground water level or impermeable soil layer

One drywell per 1000 square feet of roof area

Should not be placed on slopes greater than 25%

Should not be placed near a landslide hazard area without a geotechnical engineer's evaluation

Place filter fabric on top of the drain rock, also