

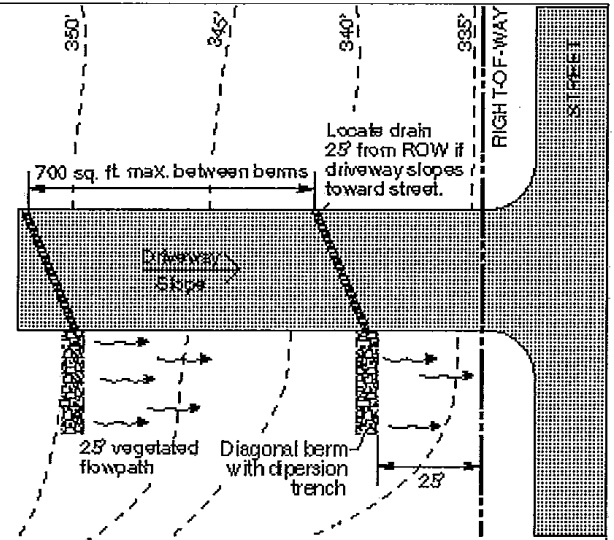
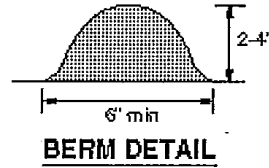


# Sheet Flow Dispersion for Flat to Moderate Driveways

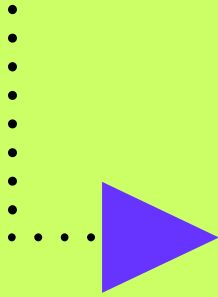

**PLAN**  
 Driveway Dispersion Trench  
 Driveway Slope Varies and Slopes Toward Street

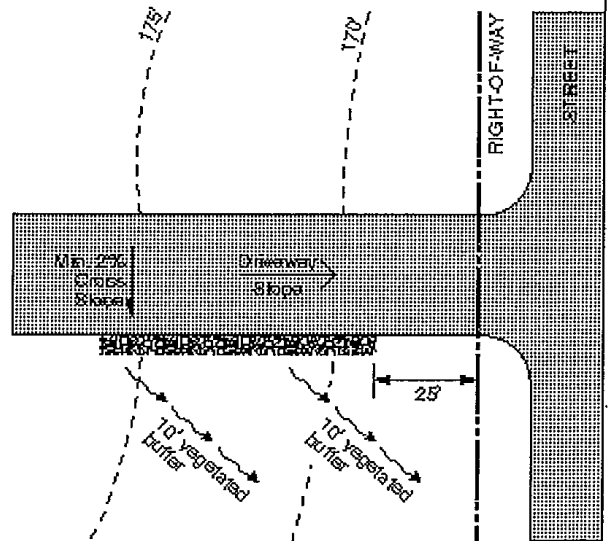

**PLAN**  
 Sheet Flow Dispersion from a Driveway  
 Flat to Moderately Sloping Driveways

## Design Basics

If you have a septic system, the discharge point must be below the drainfield

Must have 25' of vegetation for up to 150 sf of contributing driveway area. Vegetated flow path should not be steeper than 8%. If the site is steeper than 8%, the flow path length must be increased 1.5 feet for each percent increase above 8%.

No erosion or flooding of downstream properties may result

The system discharge must not be placed near a landslide hazard area or on or above a slope greater than 20% without a geotechnical engineer's evaluation